


UNIVERSAL HARNESS TO INSTALL FORD "3G" SERIES ALTERNATORS ON VEHICLES WITH "NO CHARGE" INDICATOR LIGHT

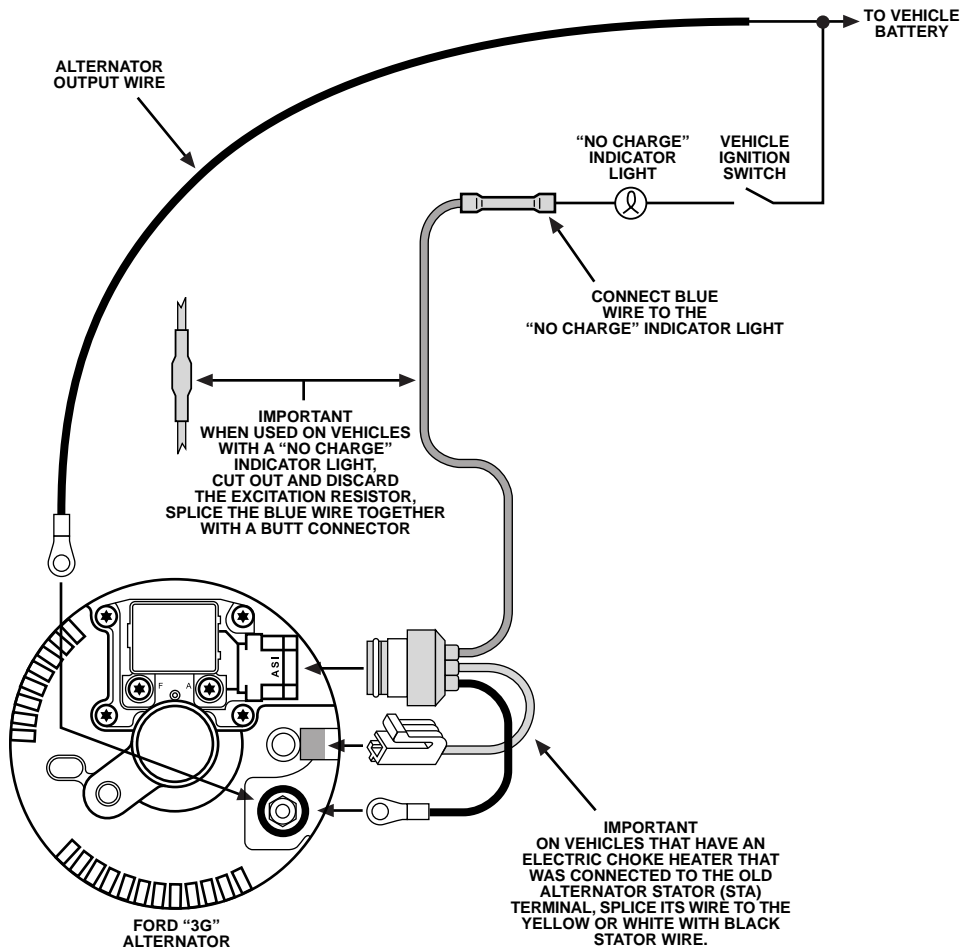

UNIVERSAL HARNESS TO INSTALL FORD "3G" SERIES ALTERNATORS ON VEHICLES WITHOUT "NO CHARGE" INDICATOR LIGHT

